

## Sanitech Hph Filter Service Instructions

Clear Water Concepts

480.373.9949

- 1 - Turn off cold water supply under kitchen sink. Or locate blue ball valve that is connected to cold water supply. It will have a small Yellow or Red tube coming out of the blue valve. (Turn Off).
- 2 - Turn blue ball valve off on top of RO storage tank.
- 3 - Open RO faucet on top of counter/sink. (Water should stop running completely). If any water running at all, including slow dripping, water is not off!! (go back to steps 1 & 2).
- 4 - Close RO Faucet.
- 5 – Remove and Replace. Remove yellow plug from new filters. **(1) Filter** at a time...Unscrew filter housing marked **Sediment filter** and replace with new Sediment filter. (counter clockwise to loosen, clockwise to hand tighten). Continue process with both filter housings marked **Bio-Guard filter and Nutricell filter**. Hand tighten filters. (If changing **Membrane**, disconnect the black drain line from the bottom of the Membrane by pushing in on the collet, then pulling the black drain line out). Membrane should be replaced every 4-5 years.
- 6 - Open RO faucet on top of sink/counter. Turn cold water supply or blue ball valve on. Turn RO tank blue ball valve on. Water will be black/greyish color for a few seconds. Let water run for 1-2 minutes until water clears up.
- 7 – Leak. If there is a leak where the filter screws into the cap. Replace the orings supplied with the new filters.
- 8 - It may be necessary to drain off a full tank of water thru the RO faucet before the water clears up.
- 8 - **CHECK FOR LEAKS FOR 5-10 MIN. AFTER SERVICE.**